



# Instruction & Warranty

## for Quickie Dispensers ingredient dispensing units

**Address:** PO Box 321, Plumpton NSW 2761, AUSTRALIA  
**Phone:** +61 (0)402 171 575  
**Email:** sales@quickiedispensers.com.au  
**Website:** www.QuickieDispensers.com.au

### IMPORTANT

It is the responsibility of the purchaser to ensure that all persons that use the dispenser have read and understood these instructions.

### MOUNTING

- This dispenser is for internal use only.
- Position the dispenser between 1.2 and 1.6 meters above floor level. Leave at least 100mm clearance above the top of the dispenser.
- Fix the dispenser firmly through each corner with appropriate fasteners and ensure the unit is level and in a controlled environment (i.e. away from direct sunlight, heat and humidity).

### OPERATING

#### TO LOAD

Remove the clicker and jar by lifting the jar out, taking care to clear the clicker's arms. Then invert, unscrew and fill the jar and then replace by reversing the procedure for removal. The units are designed for dry ingredients only e.g. granulated coffee (instant type coffee), sugar, Milo (chocolate powder), etc.

#### TO DISPENSE

Hold cup below the selected ingredient nozzle and turn the control handle. Each such actions dispenses one rounded teaspoon measure.

### CAUTION

#### ALWAYS ADD WATER LAST

Steam can cause a residue of ingredient to build up within the dispenser which lowers performance and increases risk of damage.

#### NEVER APPLY EXTRA FORCE

- Damage to the serve controller may occur if force is applied against the stop. If the controller resists movement from its "rest" position, refer to maintenance section below.
- If there is any damage to the serve controller, immediately discontinue use.
- Do not apply weight to the tray.

### MAINTENANCE

- Serve controllers should be washed thoroughly in warm water each time the ingredient jar is refilled, and completely dried before re-using.
- All surfaces should be routinely wiped clean using warm water. Do not use boiling or very hot water.

### WARRANTY

Quickie Dispensers warrants that, should this dispenser fail within 12 months of date of purchase, the faulty item will be repaired or replaced by Quickie Dispensers free of charge, provided that the failure is not due to improper use, misuse, abuse or failure to follow the instructions supplied. This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Any claim under warranty must be made within 12 months of date of purchase. Proof of purchase must be supplied.

IF YOU ARE NOT A "CONSUMER" UNDER THE AUSTRALIAN CONSUMER LAW, QUICKIE DISPENSERS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL QUICKIE DISPENSERS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OR DIRECT OR INDIRECT LOSS OF ANY KIND, INCLUDING BUT NOT LIMITED TO PROPERTY DAMAGE AND PERSONAL INJURY. OTHERWISE, TO THE EXTENT THAT THE PRODUCT IS NOT OF A KIND ORDINARILY ACQUIRED FOR PERSONAL, DOMESTIC OR HOUSEHOLD USE OR CONSUMPTION, QUICKIE DISPENSERS ENTIRE LIABILITY IS LIMITED TO THE REPLACEMENT OF THE PRODUCT OR THE SUPPLY OF EQUIVALENT PRODUCT, THE REPAIR OF THE PRODUCT OR THE COST OF DOING SO.